


NOTE: ASSEMBLE HINGES TO BODY WITH BOLTS FINGER TIGHT. WITH DOOR IN CLOSED POSITION, ADJUST TO MAINTAIN CORRECT DOOR TO BODY OPENING (.18 CONSTANT) AND THEN TORQUE NUTS TIGHT TO RECOMMENDED LOAD. LOWER BOLT IN LOWER HINGE, TO HINGE PILLAR, MUST BE TIGHTENED WITH DOOR OPEN AFTER ALL OTHER BOLTS HAVE BEEN TIGHTENED

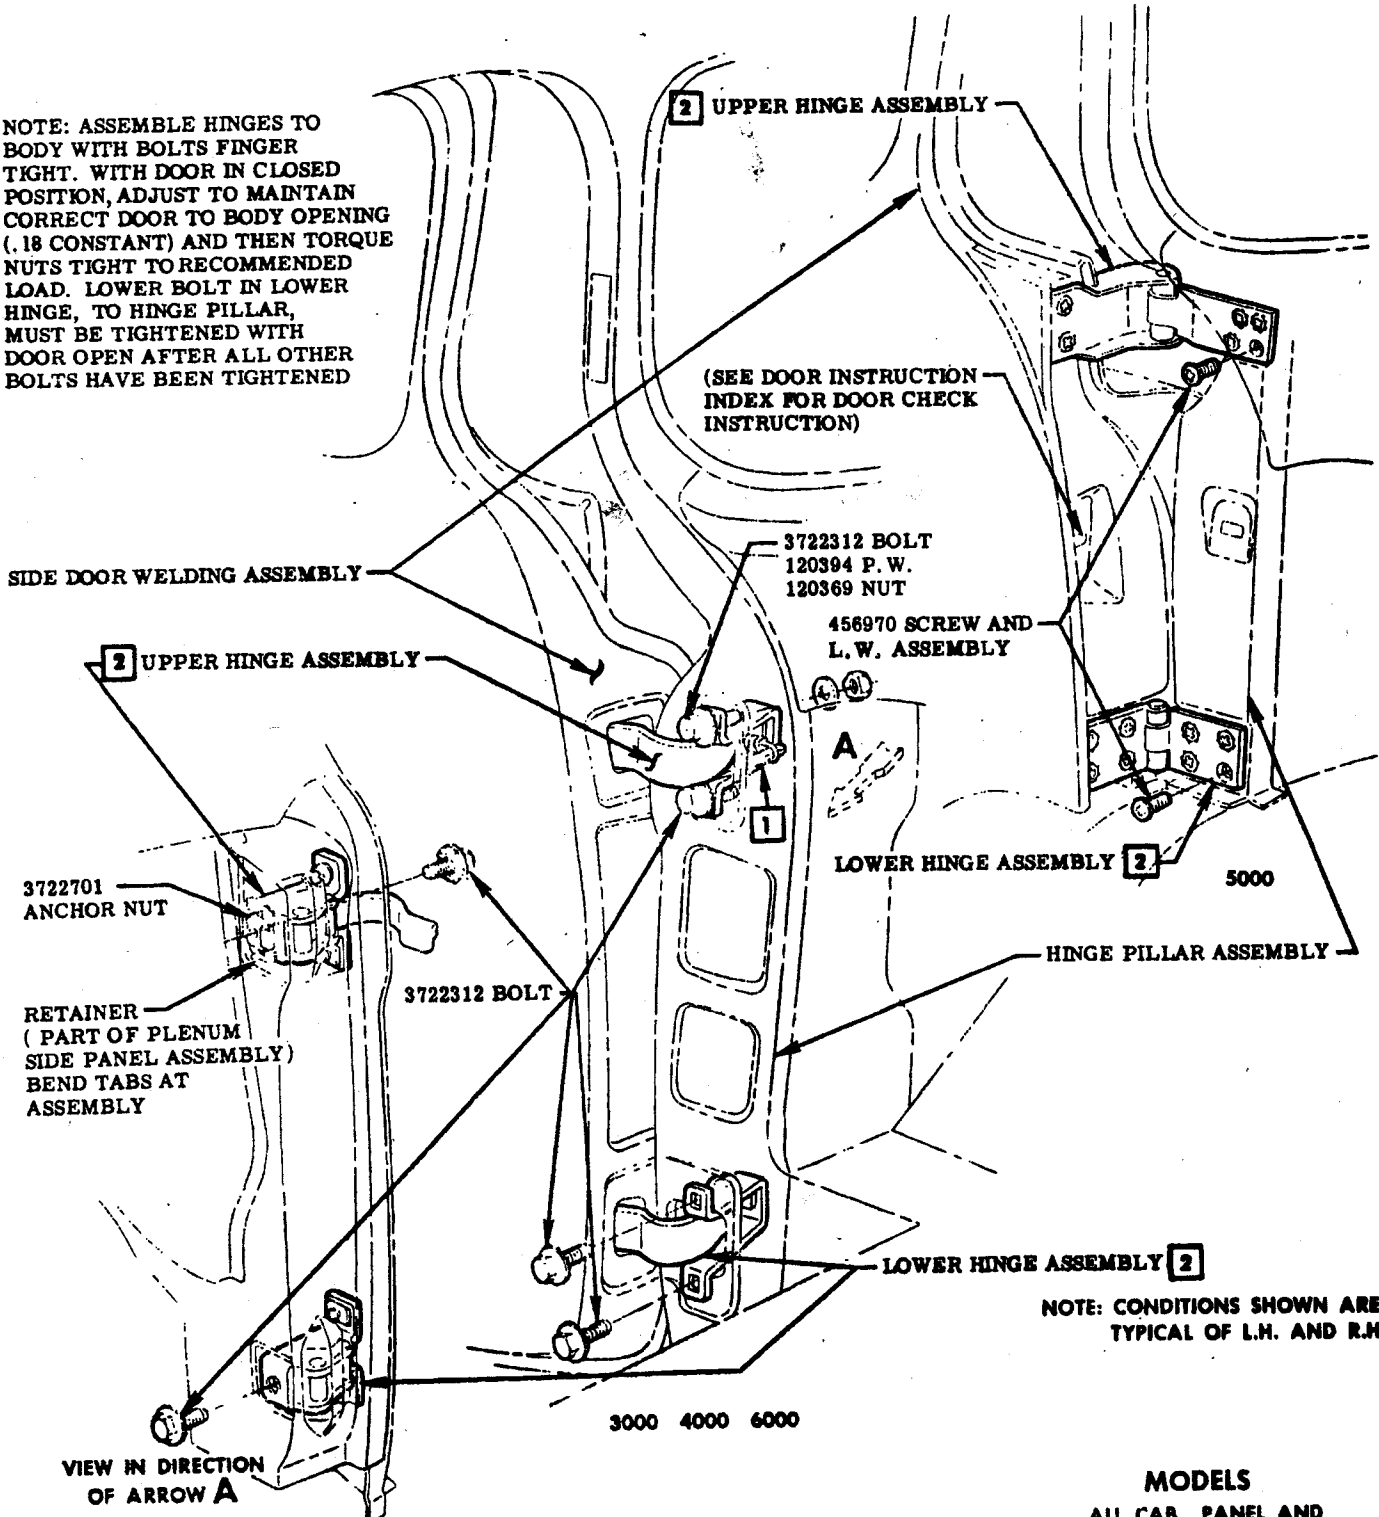

NOTE: CONDITIONS SHOWN ARE TYPICAL OF L.H. AND R.H.

MODELS  
ALL CAB, PANEL AND  
SUBURBAN MODELS  
(AS NOTED)

- 1 SEE LUBRICATION INSTRUCTION - SECTION 14
- 2 SEE DOOR INSTRUCTION INDEX FOR HINGE TO DOOR INSTRUCTION

**SIDE DOOR AND ANCHOR NUT HINGE INSTRUCTION**

					TRUCK INSTRUCTION MANUAL				
					NAME	DRAWN	CHECKED	SECT.	SHEET
					REF.	T. S.	H. V. M.		
DATE	SYM.	REVISION RECORD	AUTH.	DR.	CK.	DATE	PART No.		
4-13-55	5	REDRAWN & REVISED	8105		DC	12-1-54	3720900	1	59.00