

Fig. 15—Cowl Ventilator Grille F/F Cowl
 several positions due to serrations on pivot shaft and in arm cap (fig. 17).

Wiper Arm Pivot Shafts and Link Rod (Fig. 17)

Removal

1. Remove windshield wiper arms from pivot shafts. Procedure for removing arms is explained previously under "Arm Adjustments."
2. Remove screws which attach outside air cowl ventilator grille to cowl. Carefully remove grille forward from cowl.
3. At center of cowl, remove retainer (fig. 17) which attaches each link rod to motor drive linkage and arm assembly. Disengage link rods from pins.
4. Remove two screws which attach arm transmission

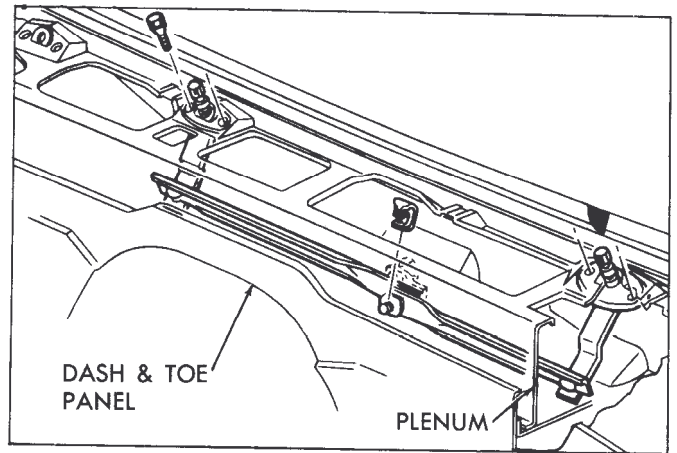


Fig. 17—Windshield Wiper Linkage

pivot shaft assembly to cowl. Remove pivot shaft assembly with link rod from plenum chamber.

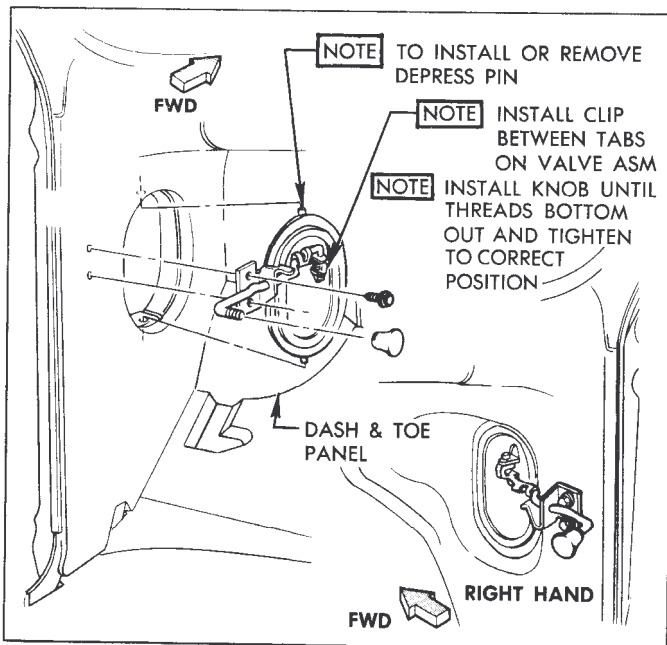


Fig. 16—Cowl Air Ventilator Valve

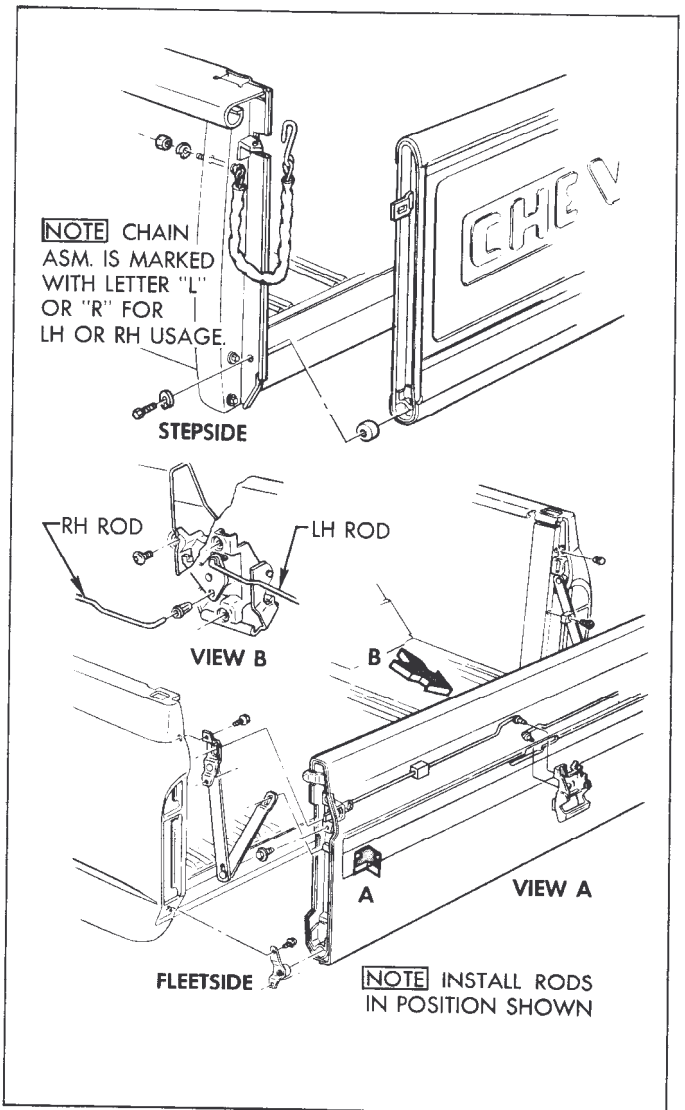


Fig. 18—Endgate - Stepside and Fleetside