

PANORAMIC PHOTOS

In the viewfinder, touch Menu  > **Modes** > **Panorama** to take a wide panoramic photo. The camera auto-captures up to six multiple shots as you move the camera, and joins them together to make one large image.

CAMERA SETTINGS

In the viewfinder, drag the tab in the lower-left corner of the screen (or touch Menu ) to adjust camera settings:

Options	
Settings	<ul style="list-style-type: none">• Widescreen (6MP) or 8MP photo resolution• Video Resolution• Storage Location (phone or SD card)• Geo-Tag (auto location information)• Shutter Tone
Effects	Set a photo effect: Normal, Black and White, Negative , and more.
Scenes	Set the type of photo you want to take: Auto, Portrait, Landscape, Sport , and more.

Options	
Modes	Set to Single shot, Panorama , or Multi-shot .
Brightness	Set the viewfinder image brightness level.
Flash	Set Flash On, Flash Off , or Auto Flash .