


Frame A is 11" long and 1/2" X 3/4" aluminum or similar.
 Frame B is 10" long and 3/4" X 1 3/8" aluminum or similar.
 1) Roll pin is 5/16" X 1 1/4" and is pressed into Frame B with 9/16" left out.
 2) 10/24 cap screws are needed. Note I have beveled the head to keep the wire from slipping off the cap screw head.
 To use the bender lay the wire on Frame B and place Frame A on top and rotate Frame A to bend the wire around the roll pin as shown.

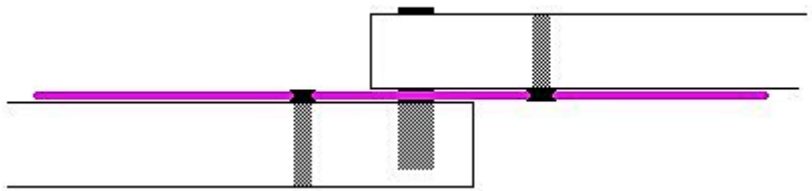

<http://testfly.iscool.net>