



INSTALLATION



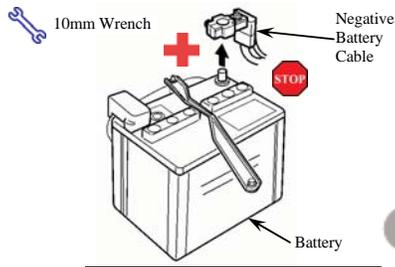


Connect Data harness cap into OBD2 or *Optional

*Cut the Rostra connector off and solder wires: Red Wire to Pin 6, Black Wire to Pin 14

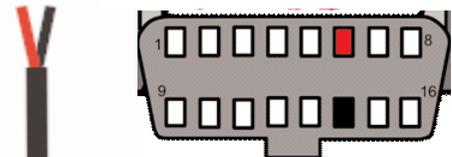

*Optional to cut

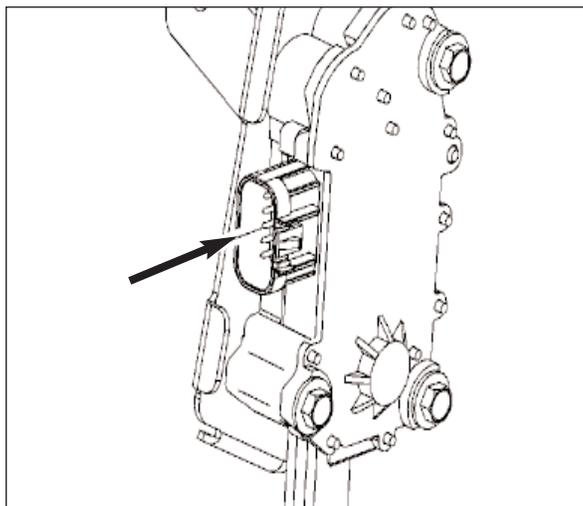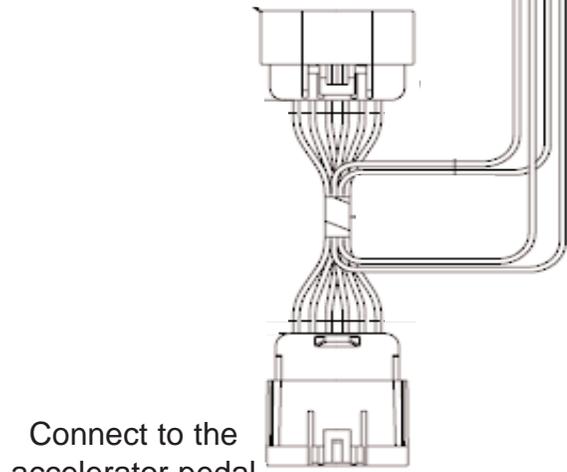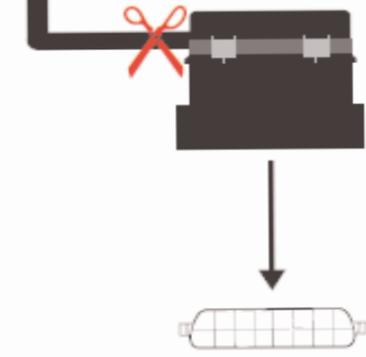

Ignition Red Wire

Locate the junction box under the driver-side lower dash area. Solder and connect RED wire from the main harness to the PINK wire in pin 6 as shown in picture below.

